

## NUTRONICS

### *MANUAL - PROGRAMMABLE DIGITAL TEMP. CONTROLLER*

RED DISPLAY SHOWS - running temperature

GREEN DISPLAY - set value

#### HOW TO SET TEMPERATURE VALUE

Press Up/Down Key to set Temp.

After Setting the Temp., Press Mode Key (↻) Once to Store the Value

Note : Whenever Value is changed, press mode Key (↻) For once second to store the new Data immediately, otherwise old Value will continue to be displayed after some time.

By Pressing any key LOC will appear

127 is lock Code

Feed 127 Code and press Enter

Lock Code only for Hy, Rt, Range Selection

Press second Key for right hand for atleast two seconds.

Rt (room temp.) will appear in green display

Press Up/Down Arrow keys to increase/decrease room temp., if need be Maximum Value +/-10

Press Again Second key from the right hand for two seconds.

(HY) will appear in the green display. HY represents hysteresis value which is used to cut temp. below or above set point. Max. Value +/- 10.

Press Up/Down Arrow keys to increase / decrease (Hy) if need be.

Press again second key from right hand for two seconds

or r will appear in the green display. This is meant to lock the upper limit of the set value